




RTS DRY-CONTACT INTERFACE

Operating Instructions

The RTS dry-contact Interface (Catalog 6300454) can be used to communicate between home automation or other third party systems and SOMFY's RTS Motors and Inteo line of controls.

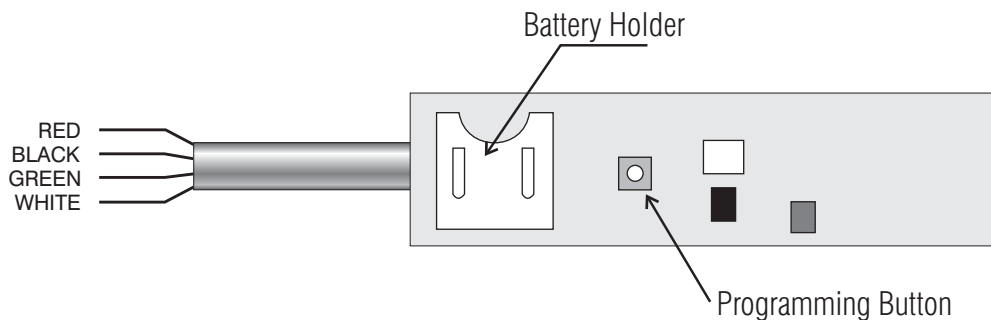

NOTE: Please Consult RTS Motor Instructions for Specific Product Details.

1. Place the RTS Motor in Programming Mode as described in the individual product operating instructions.
2. Press the programming button on the RTS Interface to program it in the memory of the RTS Motor.
3. To activate an UP command, a momentary contact (relay) closure is required between the WHITE and GREEN wires.
4. To activate a DOWN command, a contact closure is required between the BLACK and GREEN wires.
5. To activate a STOP command or Intermediate Position, a contact closure is required between the RED and GREEN wires.

SOMFY CANADA
6315 Shawson Drive, Unit #1
Mississauga, Ontario L5T1J2

SOMFY SYSTEMS, INC.
47 Commerce Drive
Cranbury, NJ 08512

SOMFY MEXICO S.A. De C.V.
Calle 3 No.47, Loc.E-5
Fracc Ind. Alce Blanco
Nau.,Edo. de Mex C.P. 53370,Mex

SOMFY SYSTEMS, INC. reserves the right to change, update or improve this document without prior notice.

© SOMFY SYSTEMS, INC. 3/02